



CDVI

Security to Access

2EASY



CDV-4791S-DXB, CDV-4791S-DXW

2EASY 2-wire, 1-way Kit Manual, Black or White Monitor



EN

1] CONTENTS

Title	Page
2] PACKAGE CONTENTS	3
3] CDV-91S DOOR STATION - PARTS AND FUNCTIONS	3
Terminal Description	3
Installation	4
4] CDV-PC7 POWER COMBINER - PARTS AND FUNCTIONS	4
5] CDV-47DX MONITOR - PARTS AND FUNCTIONS	5
Terminal Description	5
Installation	6
Installer Settings	6-8
6] SYSTEM WIRING AND CONNECTIONS	9
Single Door Station System Wiring	9
Multi Door Stations System Wiring	9
Multi Monitors System Wiring	10-11
Electric Lock Connections	12
Cable Requirements	13-14
7] PRODUCT SPECIFICATIONS	15
CDV-91S Door Station	15
CDV-47DX Monitor	15
CDV-PC7 Power, Bus Combiner	15


IMPORTANT

- This manual is limited in information. This manual gives basic installation requirements of the CDV-4791S-DS kit. For advanced features, see the device's full manuals on the CDVI UK website: www.cdvi.co.uk
- For WiFi setup of the kit, see the [CDV-47DX manual](#).


2] PACKAGE CONTENTS

Door Station	Internal Monitor	Power/ Bus Combiner	145mm DIN Rail	Kit Manual
1	1	1	1	1

3] CDV-91S DOOR STATION - PARTS AND FUNCTIONS

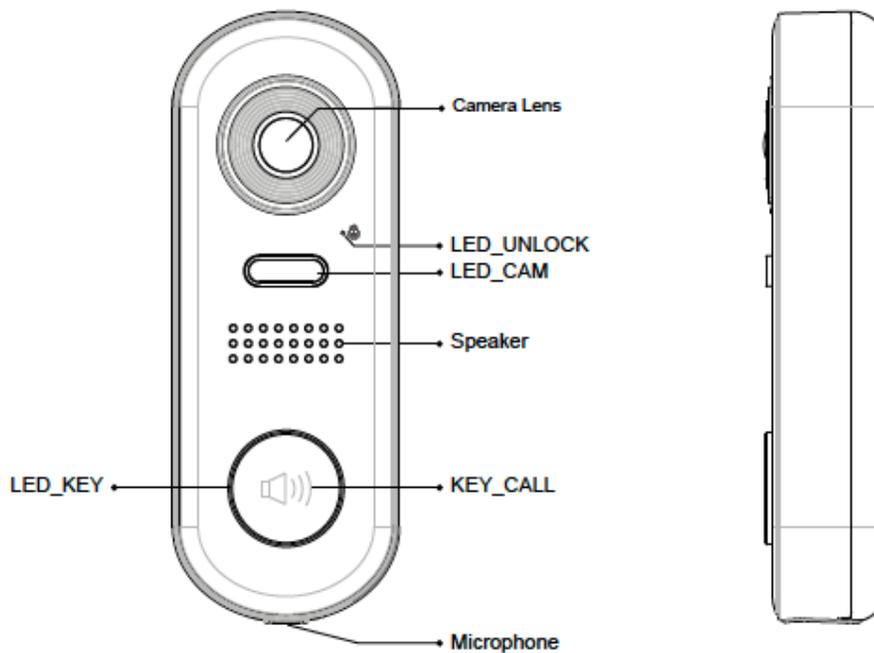

Terminal Description

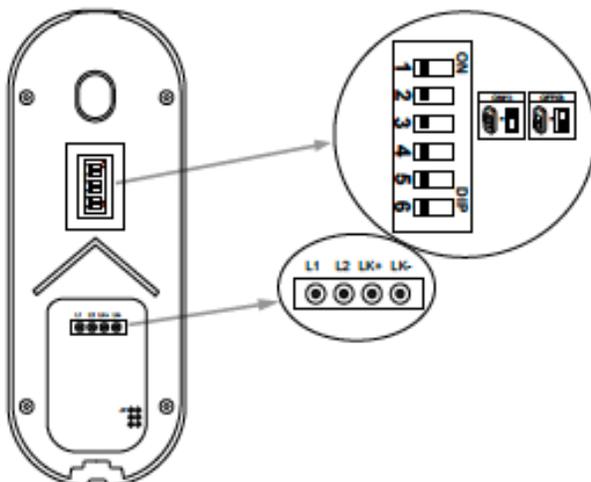


DIP:

- **Bit 1&2:** sets the door station address, a total of 4 door stations can be supported. Please refer to door station address setting.
- **Bit 3&4:** sets the unlock time for door station. Please refer to unlock time setting.
- **Bit 5:** sets the unlock mode for door station (0(OFF):open/1(ON):closed).
- **Bit 6:** 0(OFF) --> 1(ON), to enter the setting mode.

Terminal	Description
L1, L2	Connect to the Bus line, no polarity
LK+	Lock power (+) output
LK-	Lock power (-) output, connect to the power (-) inputs of the lock
JP	Lock Control Jumper

Installation

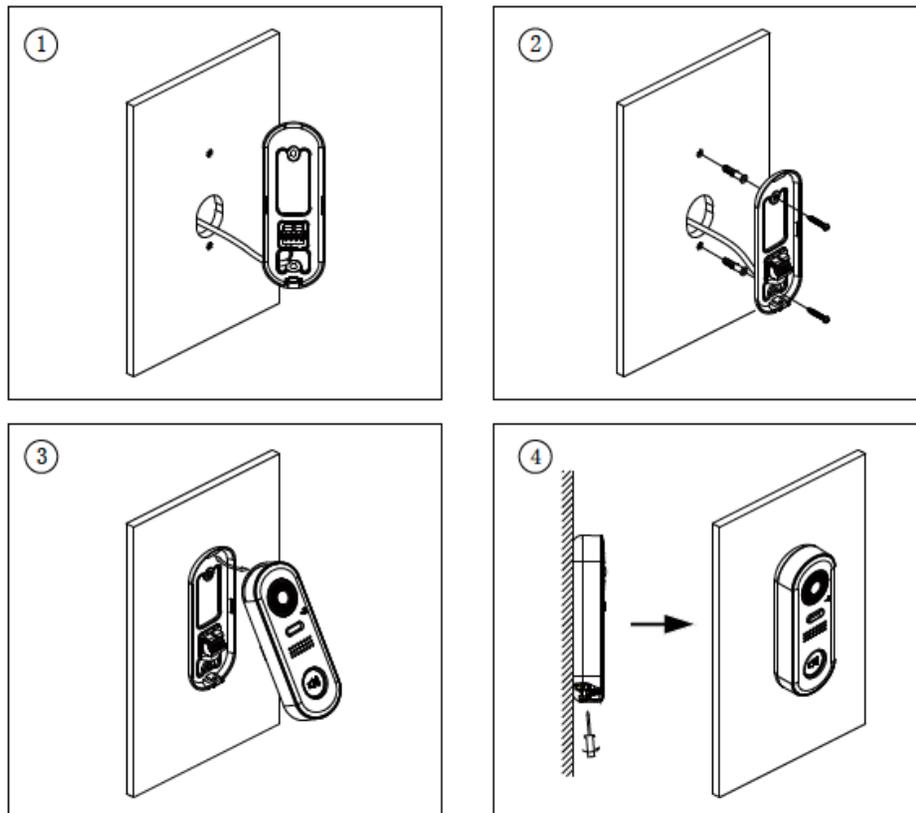


1. The recommended installation height for the door station is 145-160cm.
2. Use screws to fix the back panel to the wall and connect the cables correctly.
3. Attach the front panel to the back panel, then use the screw to secure the panel.

4] CDV-PC7 POWER COMBINER - PARTS AND FUNCTIONS

The CDV-PC7 is a power/bus combiner unit, which is designed for the CDV 2EASY 2-wire system to supply power for the external station, internal monitor and other accessories on the bus. It can operate as a normal power/bus combiner or auxiliary PSU.

Note: See next page for details of connection as an end-of-line PSU.

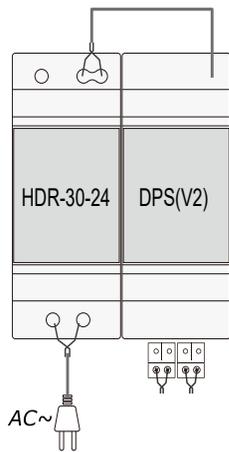

The features are as follows:

- Universal AC input/full range
- Multi protection: short circuit, overload, over voltage
- Integrated with DPS (power separator)
- Support up to 4 to 8 monitors (dependent on models)
- DIN Rail Mounting

NOTE: If the CDV-PC7 is used as an end-of-line PSU, follow the steps below.


WARNING: TURN OFF THE MAINS INPUT BEFORE CONTINUING

1. Remove the CDV-PC7 from the DIN rail.	2. Unclick the base of the DPS side.	3. Remove the base.	4. Lift off the top and cut both ends of the resistor shown, remove the resistor.	5. Replace the top and base in reverse.


5] CDV-47DX MONITOR - PARTS AND FUNCTIONS

Terminal Description

Terminal	Description
L1, L2	Bus Line Terminal
SW+, SW-	Doorbell input connection port
Ring, GND	Extension buzzer input connection port
NC	Reserved
DIP Switched Bit1-Bit5 Bit6	Reserved Video impedance matching switch Set to ON if the monitor is at the end of the line or operates with CDV-DBC4A1, otherwise set to off

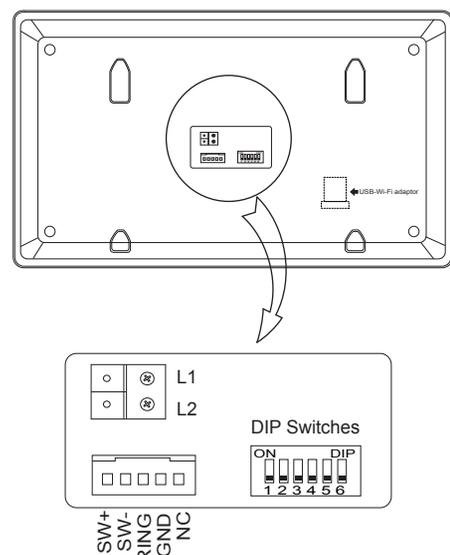

Installation

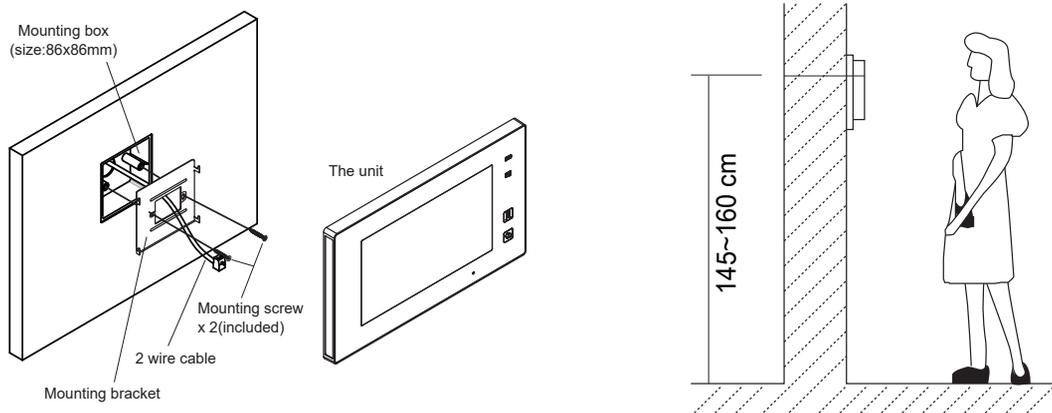


The installation height is suggested as 145~160cm.

1. Use screws to fasten the mounting bracket to the wall with standard single gang flush lightswitch box.
2. Connect the two wire cables to the unit.
3. Mount the unit to the mounting bracket, making sure the unit is securely attached to the mounting bracket.

Main Menu

The Main Menu is your starting point for using all the applications on your monitor. Touch the **Unlock** button, or touch anywhere on the screen when in standby mode - the Main Menu will appear as follows:

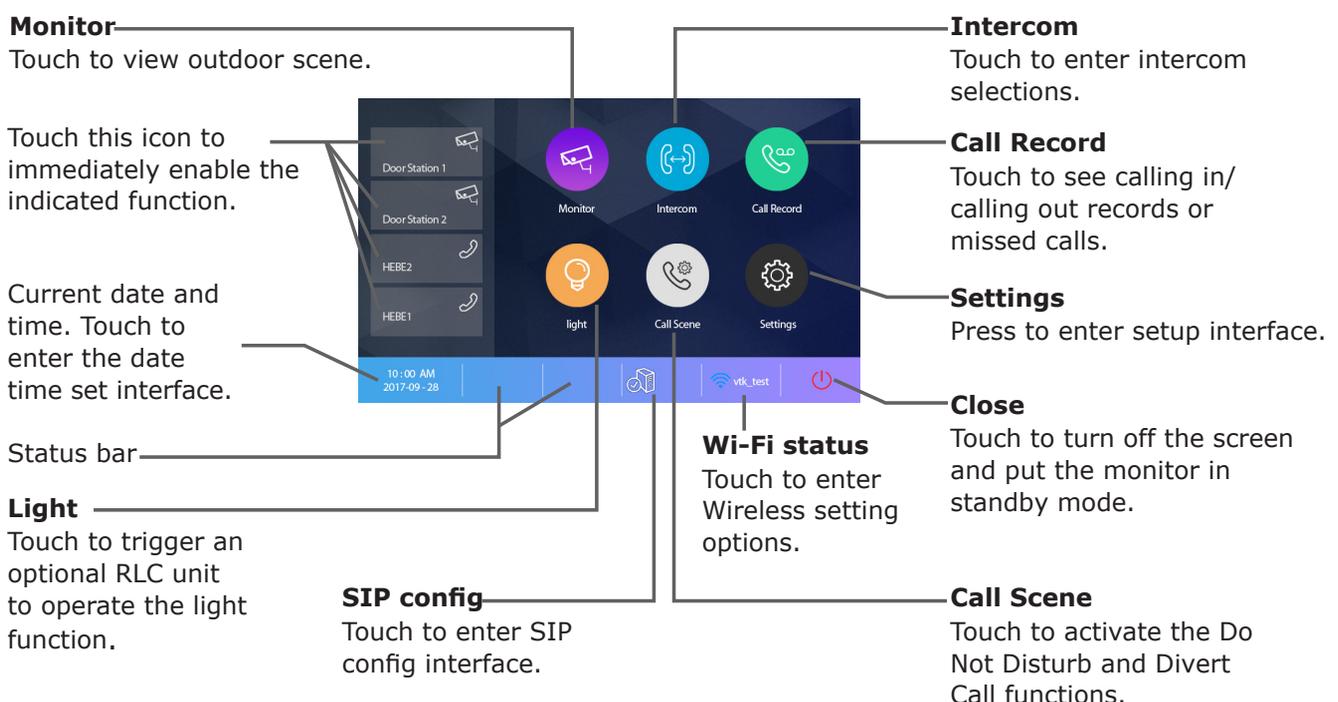

NB	Item	Description
	Missed call	Displays when there is a missed call. Touch to review the missed call in shortcut.
	Do not disturb	Displays when the function is activated. Touch to enter Call Scene interface in shortcut.
	Call transfer	
	SIP server connection active and configured	
	SIP server connection disabled	Touch to enter SIP server information interface in shortcut.
	SIP server connection active and not connected	
	WiFi connection active and not connected	
	WiFi connection disabled	Touch to enter the Wi-Fi settings interface in shortcut.
	WiFi connection active and configured	

Installer Settings

Entering the Interface

The Installer Settings page contain the device address setting and system settings.

1. Touch to enter the Settings interface.





2. Touch to enter the installer settings interface.



User Code Settings

Touch to set the user code for each monitor.

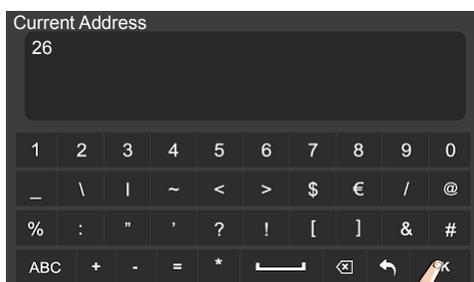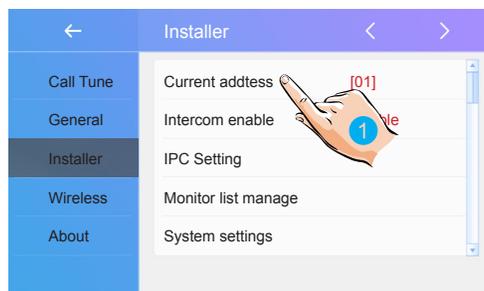

1. Enter the code by typing in the number.




2. Touch "OK" to save the code setting, complete and exit.

Note:


If dip switches 1-5 are set the monitor will show the "Dip switch setting" page. A total of 32 numbers can be set, from 0-31.

Unlock Time Setting

Setting the unlock time.

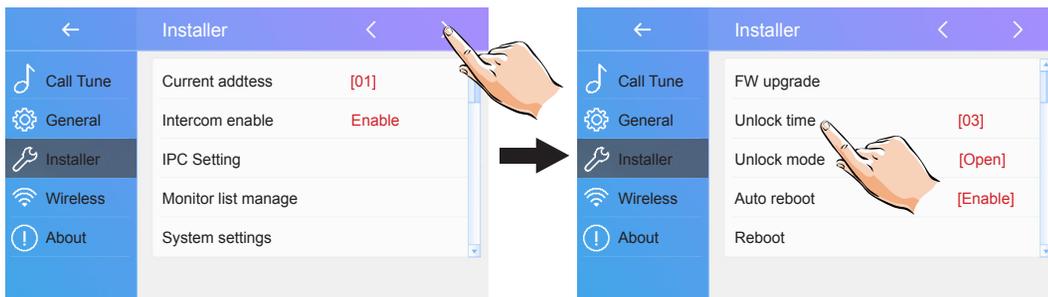


You can change the unlock time at any time. It can be set from 1 to 99 seconds.

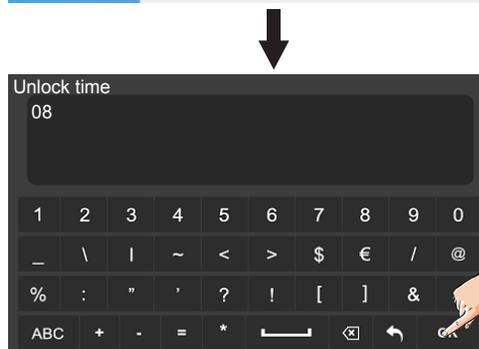


Unlock Mode Setting

Setting the unlock mode.

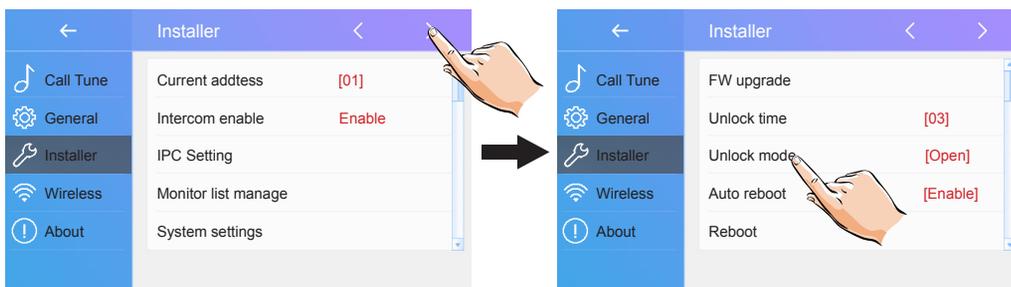


There are two unlock modes:
1. Power-on-to-unlock type = Open
2. Power-off-to-unlock type = Close

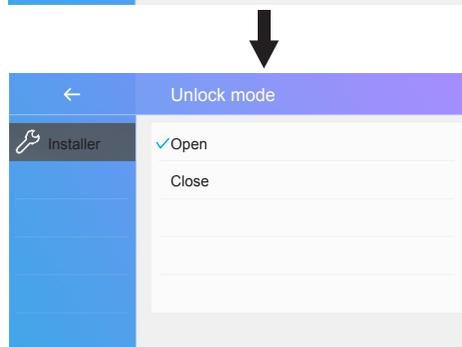


6] SYSTEM WIRING AND CONNECTIONS

Single Door Station System Wiring

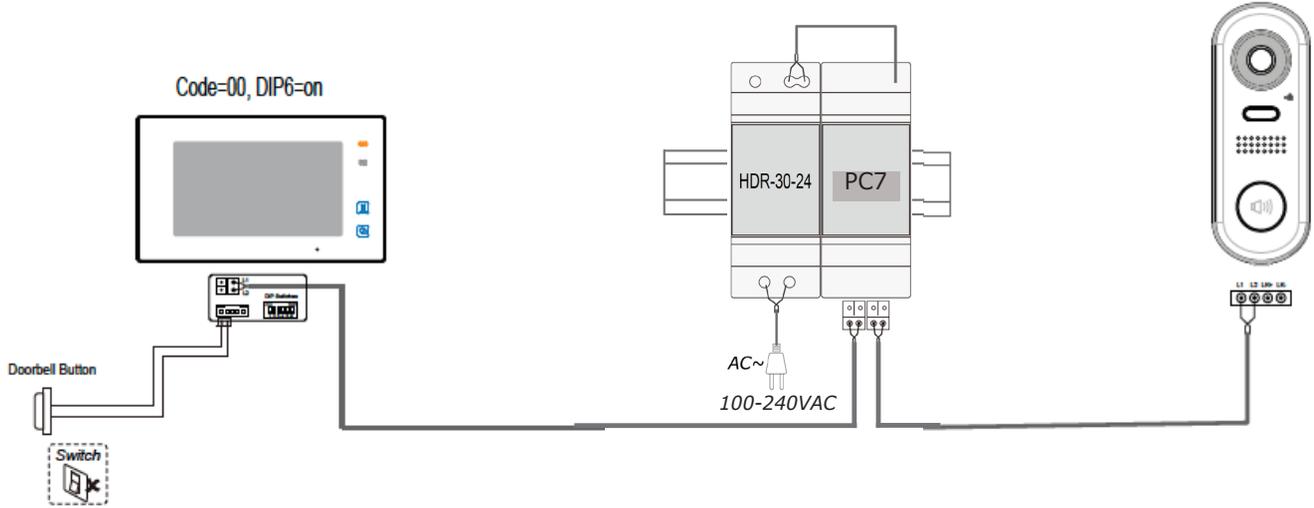


Multi Door Stations System Wiring (4 max*)

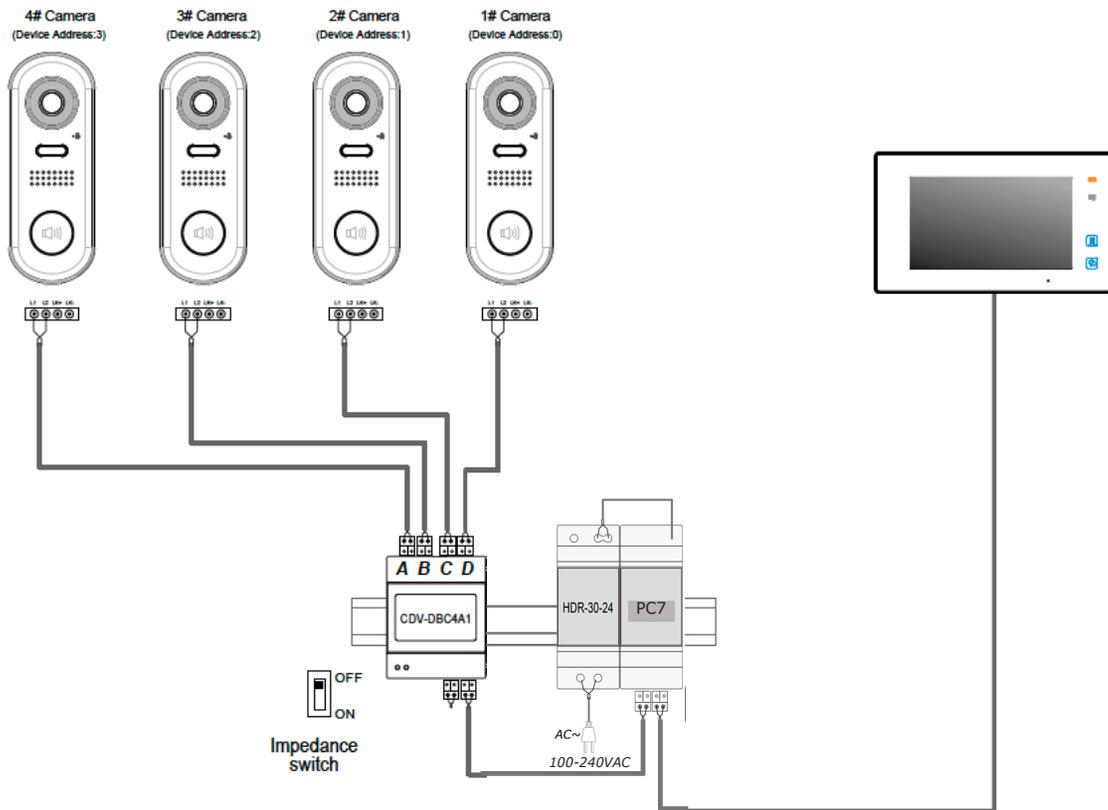

Multi Monitors System Wiring (4 max*)

Standard IN-OUT wiring

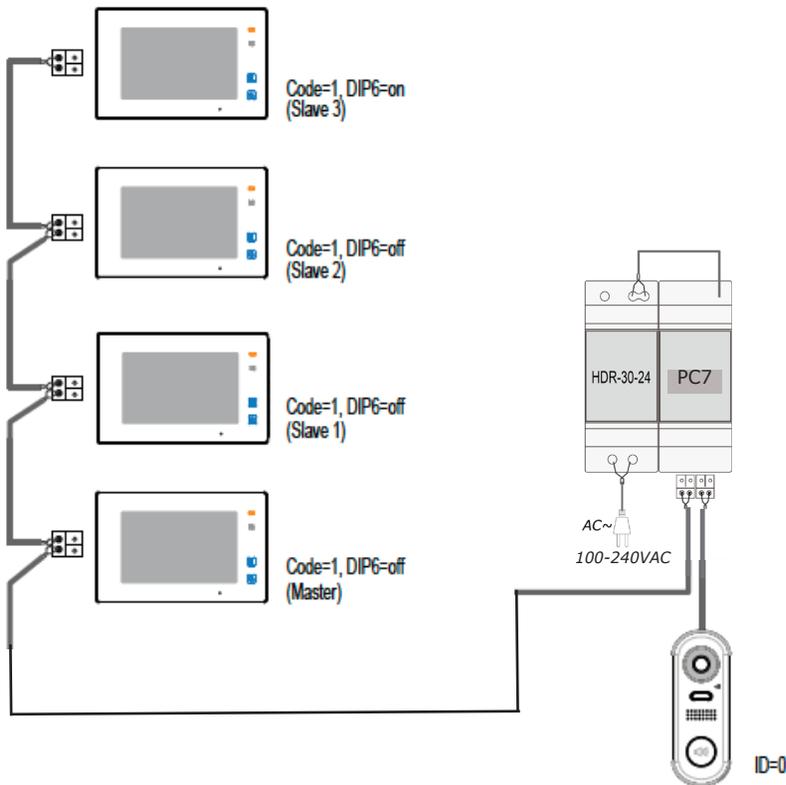


- The door station is compatible with the 2EASY CDV-47 & CDV-47DX monitors from CDVI.

- For the last monitor connected to the system, DIP6 should be set to ON.

***IMPORTANT:** Subject to cable type. Please see cable distance chart on [pages 10-11](#). For further help, call CDVI Technical Support on +44 (0) 1628 531300 or visit the [CDVI Support Centre](#).

Star topology wiring with CDV-DBC4A1

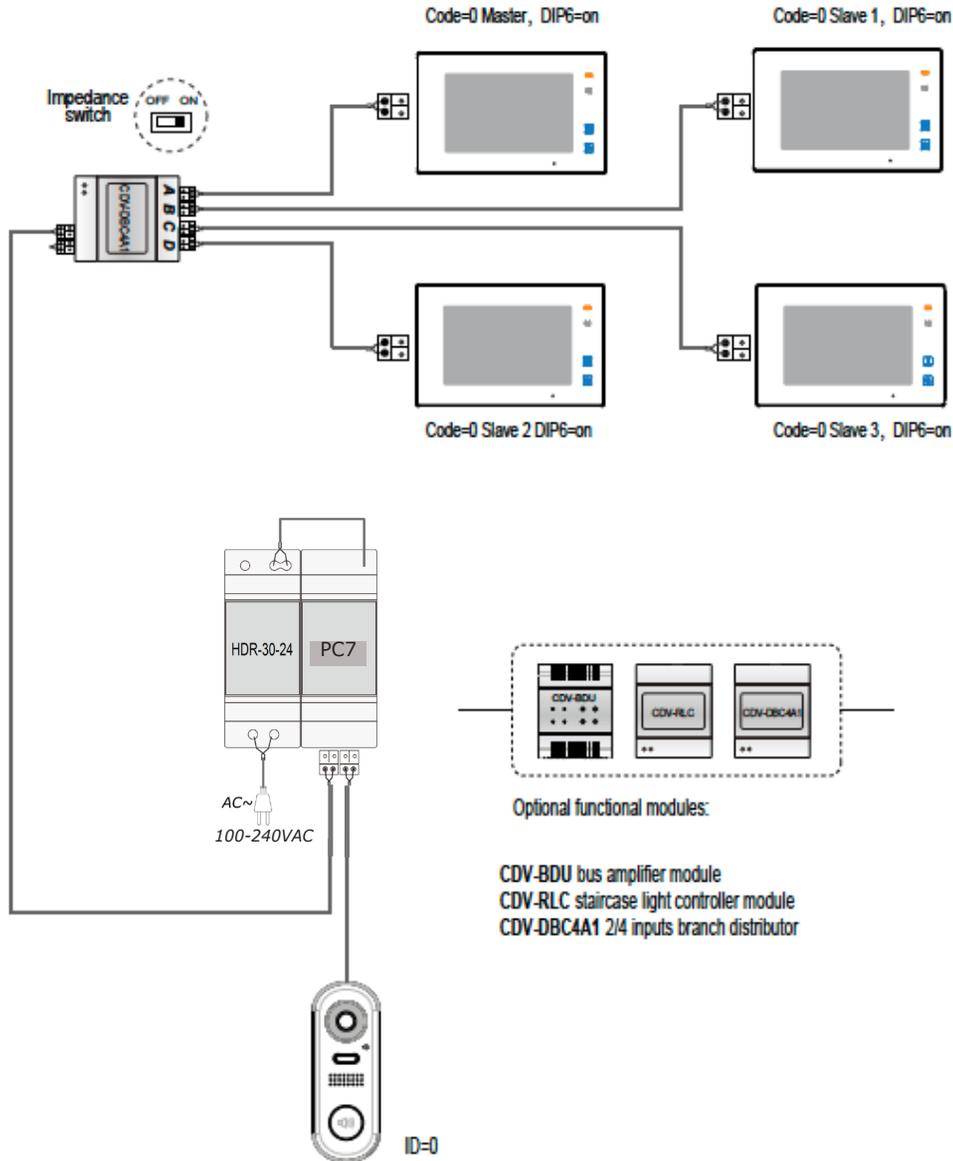


The system can be extended by up to 3 slave monitors for each monitor. We recommend you use the CDVI distributor CDV-DBC4A for the extension.

Electric Lock Connections

Door lock controlled with internal power

Notes:


1. This mode only supports Fail Secure (power on to unlock) Strikes.
2. The door lock is limited to 12V, and holding current must be less than 250mA.
3. The door lock control is not timed from Exit Button (EB).
4. The monitor's **Unlock Mode** parameter must be set to 0 (by default).

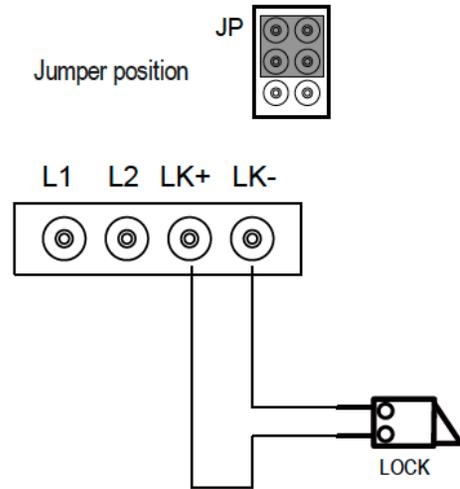

Door lock controlled with dry contact

Notes:


1. An external power supply must be used according to the lock power requirements.
2. The internal relay contact is restricted to AC or DC Max 24V/1A
3. Remove jumper before connecting.
4. Setup the monitor's **Unlock Mode** for different lock types.
 - Power-on-to-unlock (fail secure): Unlock Mode = 0 (default)
 - Power-off-to-unlock (fail safe): Unlock Mode = 1

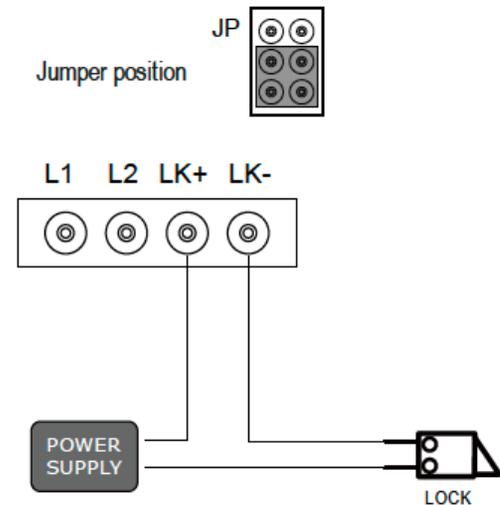

Cable Requirements

The maximum distance of the wiring is limited in the 2EASY system. Using different cables may also affect the maximum distance which the system can reach.

Standard IN-OUT wiring

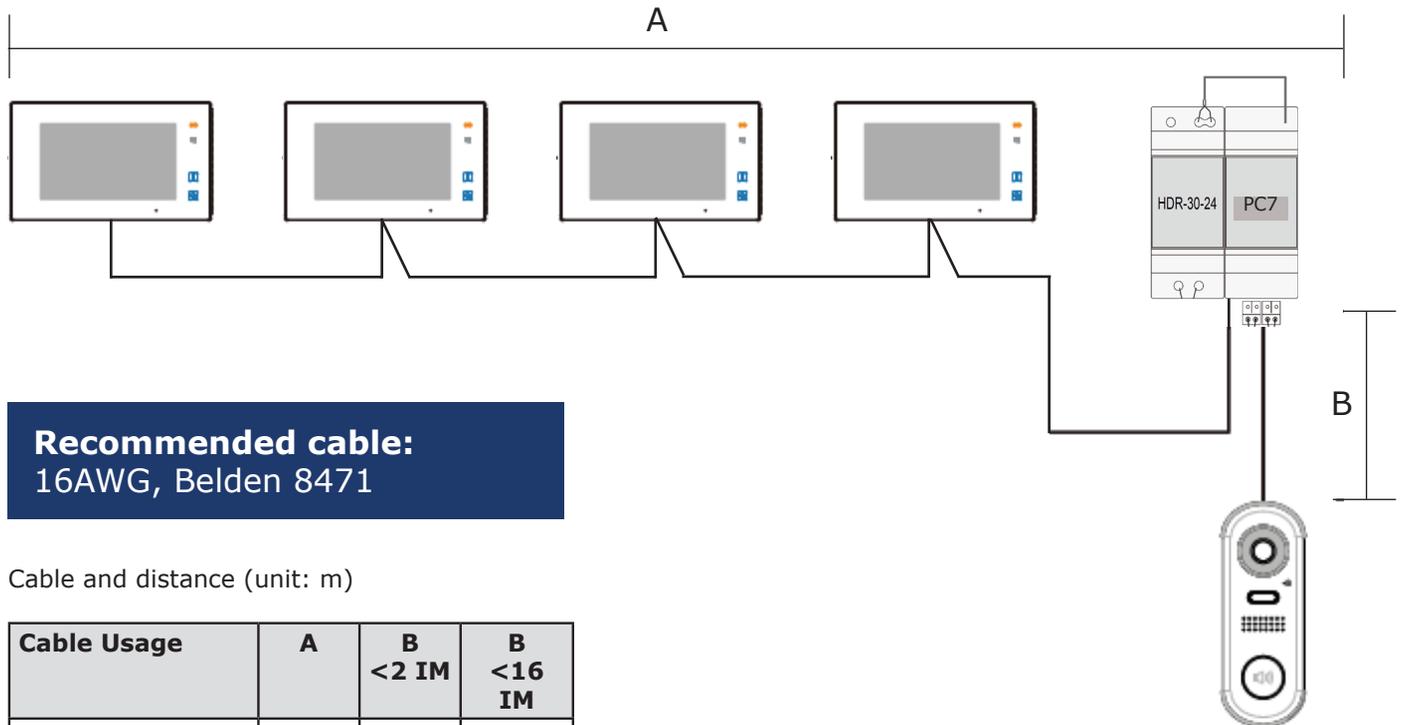


Recommended cable:
16AWG, Belden 8471

Cable and distance (unit: m)

Cable Usage	A	B <2 IM	B <16 IM
Belden 9470 UTP 2x0.75mm ²	60	100	40
Belden 8471 UTP 2x1mm ²	80	120	60

Star topology wiring with CDV-DBC4A1

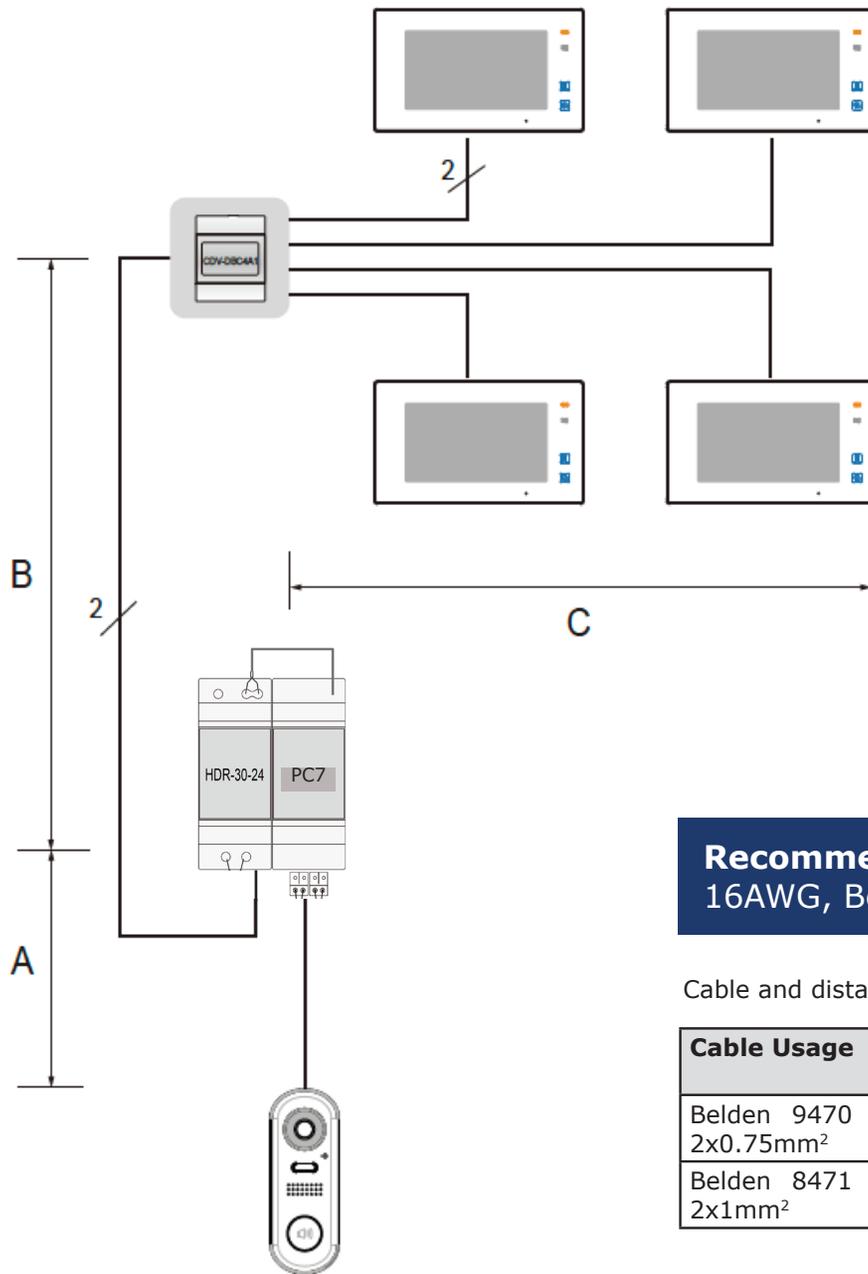

Recommended cable:
16AWG, Belden 8471

Cable and distance (unit: m)

Cable Usage	A	B	C
Belden 9470 UTP 2x0.75mm ²	60	60	30
Belden 8471 UTP 2x1mm ²	80	80	40

7] PRODUCT SPECIFICATIONS

CDV-91S Door Station

Feature	Description
Power Supply	24 Vdc
Power Consumption	Standby: 14mA, Working: 122mA
Camera	Color CMOS, 2.0 megapixel 1/2.7" fisheye camera, 170° wide angle
Lock Power Supply	12 Vdc, 250mA (internal Power)
Operating Temperature	-15°C - +55°C
Dimensions	160(H) x 60(W) x 31.5(D) mm
IP Rating	IP44

CDV-47DX Door Station

Feature	Description
Power Supply	DC 20~28V
Power Consumption	Standby 0.3W; Working 7W
Monitor Screen	7 Inch digital color TFT
Display Resolutions	800*3(R, G, B) x 480 pixels
Video Signal	1Vp-p, 75Ω, CCIR standard
Wiring	2 wires, non-polarity
Dimensions	132(H) x 226(W) x 18(D) mm

CDV-PC7 Power/ Bus Combiner

Feature	Description
Input Voltage	100-240Vac
Input Frequency	50-60Hz
Rated Output Voltage	28Vdc
Rated Output Current	1.5A
Operating Temperature	-10°C~50°C
SW Port Input Voltage	Max 230Vac, 1.5A
Dimensions	70(H) x 98(W) x 59(D) mm



Reference : CDV-4791S-DX_V02
Extranet : CDVI_CDV-4791S-DX_IM_02_EN_A4_C



CDVI Group

FRANCE (Headquarters)
Phone: +33 (0) 1 48 91 01 02
.....

CDVI FRANCE + EXPORT

+33 (0) 1 48 91 01 02
www.cdvi.com

CDVI AMERICAS [CANADA - USA]

+1 (450) 682 7945
www.cdvi.ca

CDVI BENELUX [BELGIUM - NETHERLANDS - LUXEMBOURG]

+32 (0) 56 73 93 00
www.cdviBenelux.com

CDVI GERMANY

+49 (0) 175 2932 901
www.cdvi.de

CDVI TAIWAN

+886 (0) 42471 2188
www.cdviChina.cn

CDVI SUISSE

+41 (0) 21 882 18 41
www.cdvi.ch

CDVI CHINA

+86 (0) 10 84606132/82
www.cdviChina.cn

CDVI IBÉRICA [SPAIN - PORTUGAL]

+34 (0) 935 390 966
www.cdviIberica.com

CDVI ITALIA

+39 (0) 321 90 573
www.cdvi.it

CDVI MAROC

+212 (0) 5 22 48 09 40
www.cdvi.ma

CDVI SWEDEN [SWEDEN - DENMARK - NORWAY - FINLAND]

+46 (0) 31 760 19 30
www.cdvi.se

CDVI UK [UNITED KINGDOM - IRELAND]

+44 (0) 1628 531300
www.cdvi.co.uk

CDVI POLSKA

+48 (0) 12 659 23 44
www.cdvi.com.pl

All the information contained within this document (pictures, drawings, features, specifications and dimensions) could be perceptibly different and can be changed without prior notice. - Oct 2021