




VIPER-HDAL-FSK Adaptor set-up

The FSK adaptor is required to allow the VIPER DVR to control composite video format Vista PTZ domes over the coax.

System wiring configuration:

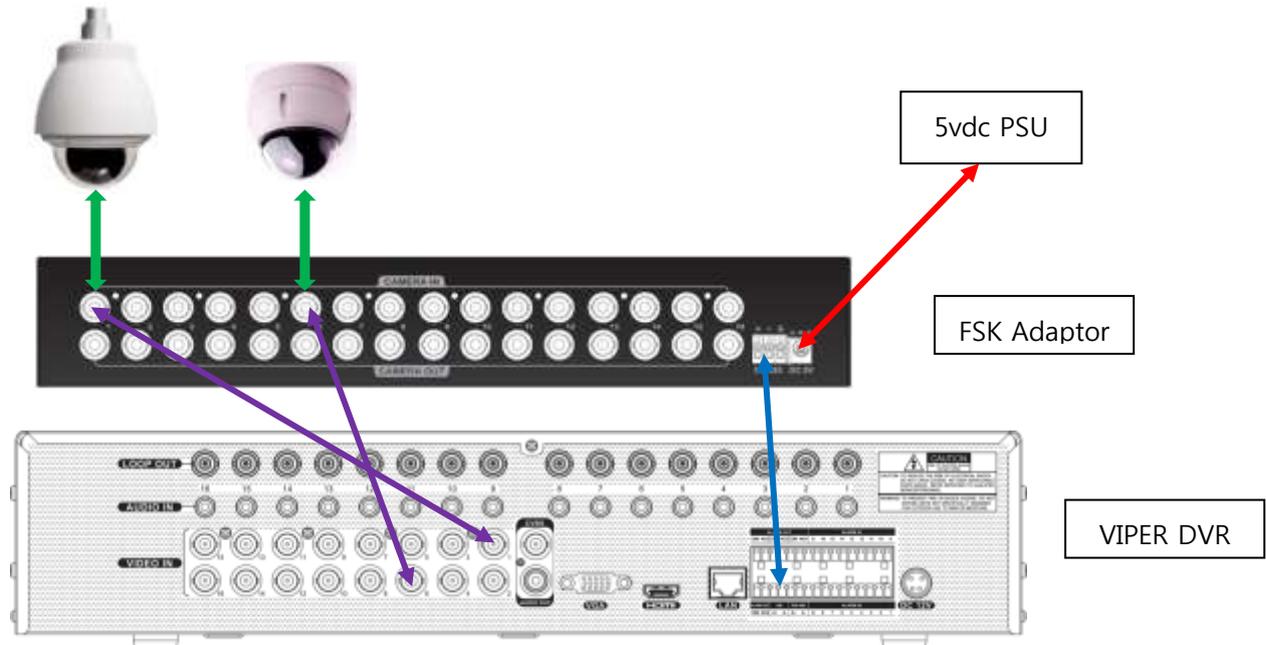

1. Connect the **coax** cable from the PTZ dome to the CAMERA IN on the FSK Adaptor.
2. Connect the coax cable from the CAMERA OUT on the FSK Adaptor to the VIPER DVR.
Note: The video channel numbers on the adaptor and DVR must match 1 to 1, 2 to 2 and etc.
3. Connect the **RS485** cable from FSK Adaptor to VIPER DVR RS485 port (+ to +, - to -).
4. Connect **5VDC** 1A adaptor in the FSK adaptor.
5. Set the PTZ protocol for the specific channels to FSK in the DVRs PTZ menu.